


**Use the thinnest flat blade screwdriver you have. Gently and carefully insert the tip into the gap between the leather and the cap**



**After the screwdriver is inserted about 1" lift up and the cap will pop off. Do this in a place you can find the cap after it flies off.**

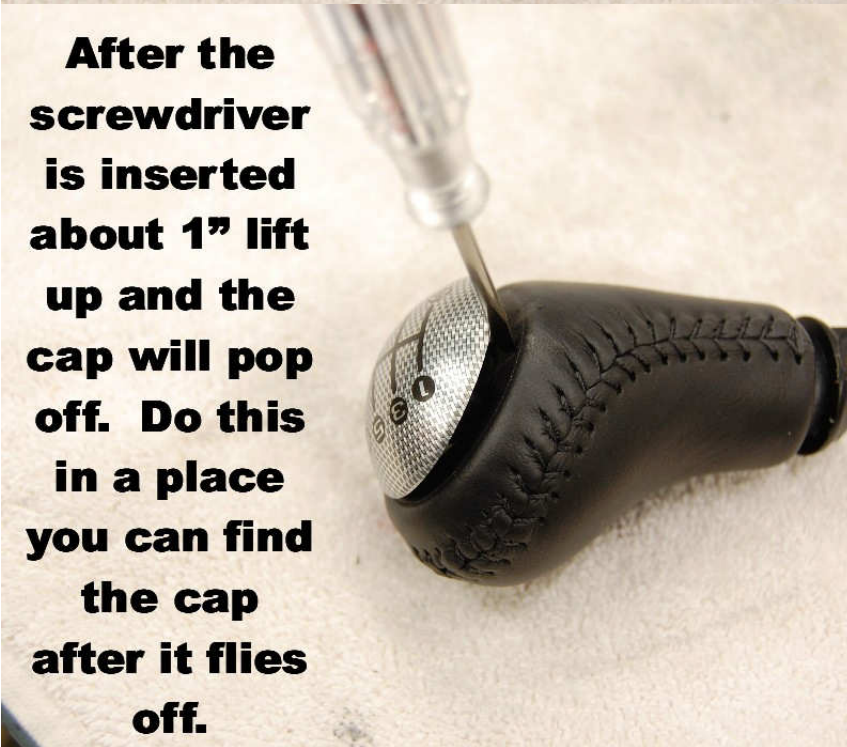

**If the metal clip that is shown in the cap below does not come off with the cap remove it from the knob and reinsert it in the cap. Press your new custom cap on, making sure to align the pin with the hole**

