

# OLD SCHOOL MILD2WILD


1. Remove the OEM foot rest you will see 2 nuts holding it in place.
2. To install the switch in your existing foot rest drill a hole with a  $1/2$ " bit approx 1" down from the top and in the center of the unit. Install the switch and secure the cable with the provided tie down block and zip tie. Apply the block to the smooth side and lock the cable in place.
3. Remove the passenger side floor mat and fold down the access to the fuse area. Run wire behind the carpet just below the upper lip and insert the end of the wire through driver's side and it will exit on the passenger side (2 people help)



The wire will exit approx here  
Your text here.



Pull down the floor board to access the fuse block

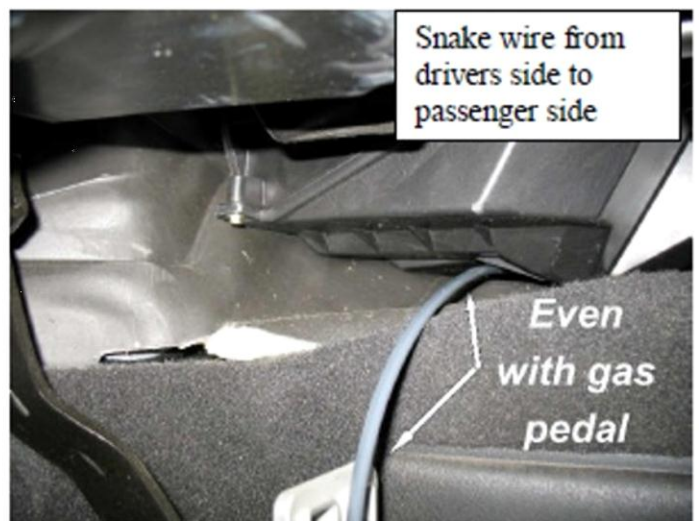

Snake wire from drivers side to passenger side


Even with gas pedal



Remove the seat heater fuse and the exhaust fuse

Connect the black wire from the switch to the fuse tap using the BLUE butt connector.

Install the fuse tap in the seat heater spot making sure the red wire exits to the right and the fuses point down. Install the white wire spade in the exhaust fuse spot on the **LEFT SIDE ONLY**

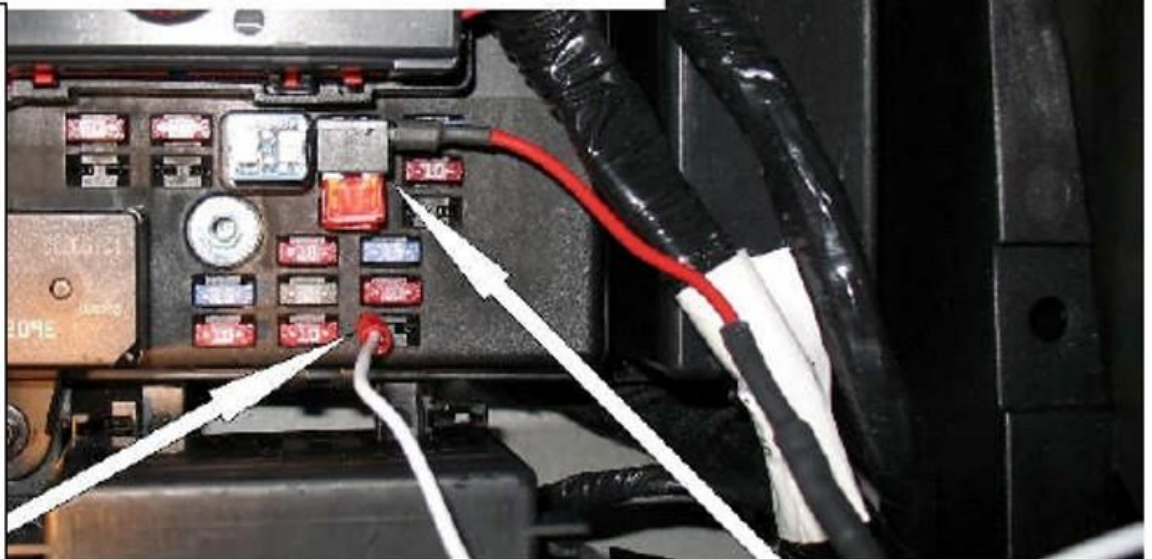

Install the white wire spade in the exhaust fuse spot on the **LEFT SIDE ONLY**

Install the fuse tap in the seat heater spot making sure the red wire exits to the right and the fuses point down.